

POPCORN POPPER

This popper operates on standard voltages, 120 volt, 60 cycle, single phase, AC current.

Create your own "party effect" by popping 4 to 5 batches in a row to fill the popcorn window and step back to watch your guests line up.

PLEASE READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USE

IMPORTANT INFORMATION EXTENSION CORDS

Extension cords should not be used. You should have a properly sized outlet right at the machine. Fires can result from a light duty extension cord that overheats due to overload. You need a No. 12 wire for these machines, and extension cords of this heavy duty are usually available at your rental center. If you go over 25 feet from the outlet a No. 10 wire would be required. The extension must have a ground wire, properly connected, or you lose the safety features built into this machine.

CONTROLS

There are three switches on this popper.

1. LIGHT AND WARMER SWITCH—turns on heat lamp and optional strip heater under corn pan.
2. KETTLE MOTOR SWITCH—turns on motor which drives kettle agitator shaft.
3. KETTLE HEAT SWITCH—turns on heat element inside kettle.

CAUTION: The motor air intake and exhaust holes located on top of machine must be clear of any obstruction. **DO NOT COVER AIR VENT HOLES** as serious damage may result.

TO AVOID SERIOUS BURNS, DO NOT TOUCH KETTLE WHILE IT IS HOT!!!

TO START POPPING

1. Turn "Kettle Heat" switch and "Kettle Motor & Exhaust" switch ON.
2. "Test Pop" a kettle of corn.
 - A. Place one fourth (1/4) of the proper oil measure in the kettle along with three kernels of unpopped corn.
 - B. As soon as the three kernels pop, place the balance of the oil, plus the measured amount of corn and "Flavacol" (if needed) in the kettle. Close lid.
3. After the corn has finished popping, rotate the handle to dump the popcorn still in the kettle. Return the kettle to the upright position.
4. Repeat the cycle starting with Item No. 2, (eliminate the "Three Kernel Test Pop" step) and put a full charge of ingredients in at the same time to pop another kettle of corn. **NOTE: ALWAYS POP 4 to 5 BATCHES OF CORN IN A ROW. THE QUALITY AND FLAVOR ARE BOTH BETTER ON NO. 2, 3, 4, and 5 THAN ON THE INITIAL BATCH.**
5. On the final kettle of corn, it is a good idea to turn the "Kettle Heat" switch off, just as the lids are forced open by the popping corn. This saves electricity, since there is plenty of heat in the kettle, and also helps eliminate smoke and odor after you have stopped popping.

When you are finished popping, make sure "Kettle Heat" and "Kettle Motor & Exhaust" switches are turned "OFF". **NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING.** If you place oil in a hot kettle, remember to finish that popping cycle, or turn off the kettle. Exposure to heat starts to break down color and flavor of popcorn oils.

Always wipe the complete exterior of your kettle with a heavy cloth immediately after you finish popping and the kettle has cooled. Oil drippings will come off quite easily at this time, but will burn on and stain if not removed.

6. Turn all switches "OFF" at the close of your operations.

CLEANING INSTRUCTIONS

After you finish popping for the day, or your event, let kettle cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from machine. With a cloth, wipe out the inside of kettle, the kettle lids, kettle crossbar, outside of kettle and underneath. **DO NOT DUNK KETTLE IN WATER!!!**

For fresh corn tomorrow: Always remove all the popped popcorn and pack it into clean plastic bags. Tie this tightly with a twister and you can enjoy fresh popcorn again tomorrow. Make sure the machine is sparkling clean when you return it and **AVOID CLEANING CHARGES.** Don't forget to remove the old maid pan and empty out the unpopped kernels. Wipe clean.

If any problems occur during use, please call your professional party rental center. **REMEMBER,** you are renting this equipment. Be sure to understand your rental contract and be familiar with all charges for any damage or additional cleaning.

*Complete your event by renting: Tables, chairs, umbrellas, linens, etc.
Also Purchase: Paper and/or plastic party accessories.*

*Compliments of your
A.R.A. Member Rental Center*



ARROW PAPER PARTY RENTAL
567 COLMAN ST.
NEW LONDON, CT 06320
(203) 442-4575

